Media MessageSet

The *Media* messageset contains a set of events that are used to report status changes of removable media to upper layers. The events distinguish between *cards* (for example a PCMCIA card controlling a disk or network) and *media* (floppy disks, CDROMs, tapes etc.) since on a laptop both the controller card and the media may be removable for external drives.

Event Definitions

MEDIA_CARD_EJECT

The MEDIA_CARD_EJECT event signals the removal of a controller card from the system. The slot_nr identifies which physical interface has been removed

MEDIA_CARD_INSERT

The *MEDIA_CARD_INSERT* event signals the insertion of a controller card into the slot into the slot identified by *slot_nr*. No further information is given, it is up to the individual processes receiving the event to probe the slot to determine the type of card.

MEDIA_MEDIUM_EJECT

The *MEDIA_MEDIUM_INSERT* event signals the (possible) removal of the medium in slot *slot_nr* of the device. Processes receiving this event should assume that the medium has been replaced, and clear any cached data for that

device. Note that, in particular, this event is generated when the floppy-drive is turned off, since the medium can be removed and replaced without the drvier being made aware of it.

MEDIA_MEDIUM_INSERT

The *MEDIA_MEDIUM_INSERT* event signals the detection of a removable medium being inserted into *slot_nr* of the device. As not all devices are capable of detecting media insertions, upper layers can usually probe for a valid medium, rather than use this event.